



Triton Communications

We Keep You Connected

This works on most NEC Phones systems

From any display phone, with the handset in the cradle: Press CALL1 or Speaker button

Dial #*#*

Dial 374772

Dial HOLD

Dial 10-01-01

Following the prompts (Dial Year + HOLD Dial month + HOLD Dial day + HOLD Dial week + HOLD Dial hour + HOLD Dial minute + HOLD Dial second + HOLD)

Hit the MSG key twice , Hit the Speaker button



For Support Call 714.855.4577